

9000 & 9100 Needle Case Error

A Needle Case Error means that the needle would hit the needle plate if the Embroidery machine were started.

When you see this error, press Stop. This will stop the beeping and will show the active needle as (-).



Rotate knob B until a number or letter appears in place of the (-) such as 1, 2, 3, or A, B, ---, F

Now press "SET". This should clear the error and you can now use your embroidery machine as usual.

